

EPSON

Knowledge Base

 
Article: KB020005

How do I install a USB printer on Windows 2000 or XP?


Insert the EPSON Printer Software CD-ROM and follow the onscreen instructions to install the driver. When requested ensure that the USB cable is connected to the printer and PC and switch the printer on.

Instructions

Insert the EPSON Printer Software CD-ROM and select Install EPSON Printer Driver / Utility. At the following screen ensure that the USB cable is connected to both the printer and the PC and the switch the printer on.

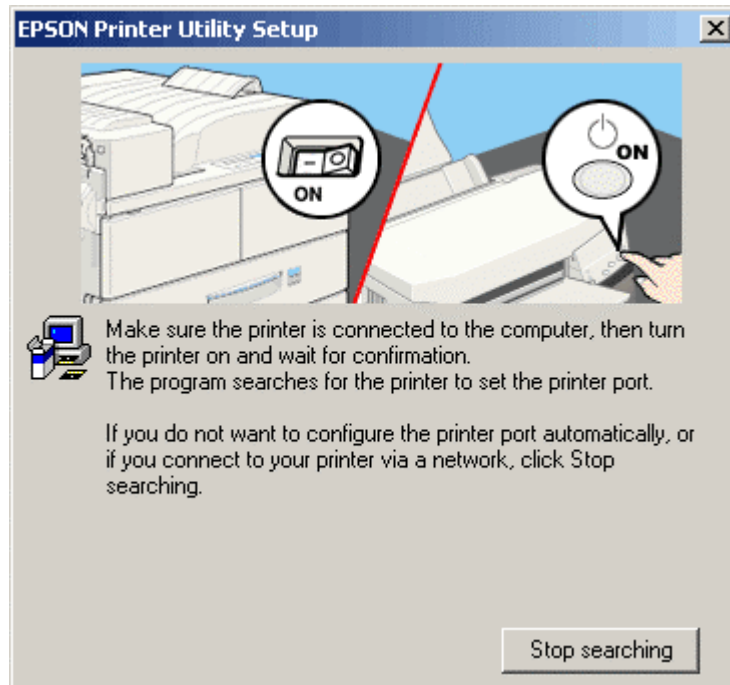

Setup will now confirm completion.

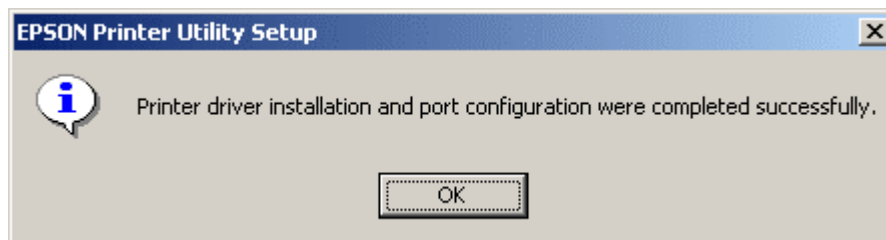 

Click **OK** to complete. To be able to monitor the ink levels of your printer you have to install EPSON Status monitor. This is supplied on the EPSON Printer Software CD-ROM. For instructions on how to do this please click the link:

[How do I monitor the ink levels on my EPSON Stylus printer using Windows 2000 or XP?](#)