EPSON

Knowledge Base

Article: KB020009

How do I monitor the ink levels on my EPSON Stylus printer using Windows 2000 or XP?

To monitor the ink levels on your printer you need to install the EPSON Status monitor utility supplied on the CD-ROM EPSON printer software. To access the Status monitor proceed by clicking Start, select settings and then printers. Right click on the icon for the relevant printer and select Printing preferences. Click on the utility tab and click on the icon for Status monitor. This will now display your ink levels.

Instructions

Proceed by inserting the EPSON Printer Software CD-ROM supplied with the printer. The example used here is the EPSON Stylus C60. Select **EPSON Status Monitor** and click on the arrow pointing to the right.



Click OK.



This will then copy the files.

D:\ENGLISH\STM3\E_S1E0C2.DLL

As requested turn the printer on ensuring that it is connected.



Setup will now confirm completion. Click **OK** and restart your computer.



To access the Status Monitor utility click Start, Settings and then Printers.



Right-click on the relevant printer and select **Printing Preferences**. This will display the driver settings.

EPSON Stylus C60 Series Printing Preferences					
Gi Main Gi Paper 🔅 Layout 💏 Usity					
Media Type					
A4 210 x 297 mm	Plain Paper 💌				
	Ink G Color C Black Mode				
	C Automatic				
R	Quality Speed				
Normal Color Controls MicroWeave : Ott High Speed : On	Biesk Color Toos				
EPSON Version 5.22	Print Preview Technical Support				
OK.	Cancel Apply Help				

Click the **Utility** tab. Click on the icon for Status Monitor and this will now display your ink levels.

EPSON Status M	onitor 3 : EPSC Y	IN Stylus C60) Series 🔀
	Ready to print.		×
r Ink Levels			ОК
			Information
			Technical Support

Use the Status Monitor utility to establish which cartridges are low or empty.