

EPSON

Knowledge Base

Article: KB020157

How to do if I get a blank page in the first one while launching the text in MS Word?

Instructions

You need to use MS Word in Scan to OCR and try to change the file type as HTML format will resolve this issue.

Scan to OCR can auto detect MS Word; you do not need to register it.